



OnHub Congestion-sensing Antenna Replacement

By the end of this guide you will have replaced the congestion-sensor antenna.

Written By: Joseph Ainsworth




INTRODUCTION


In this guide, we will walk through the steps necessary to replacing the congestion-sensing antenna.

TOOLS:

- [Desoldering Braid](#) (1)
 - [Solder](#) (1)
 - [Soldering Station](#) (1)
 - [Staples](#) (1)
 - [Metal Spudger Set](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Speaker Grille

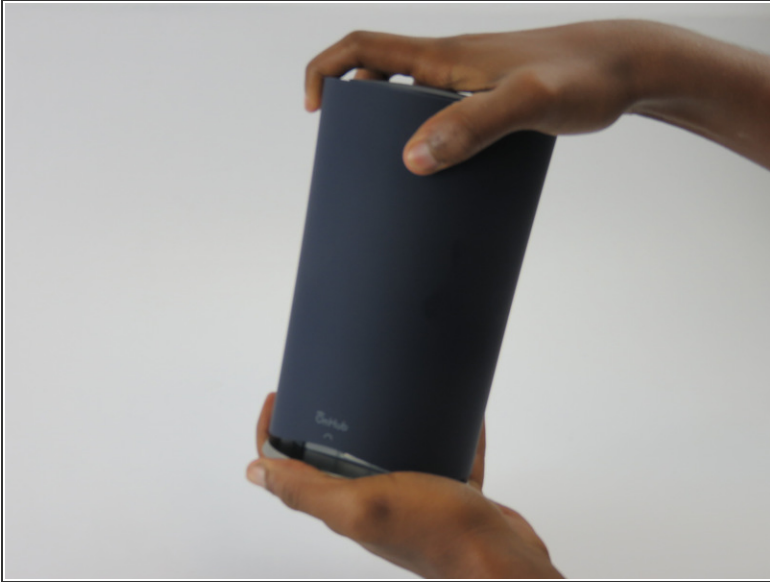

 Make sure the device is unplugged before proceeding with the disassembly.

- While holding the base firmly using the palm of one hand, remove the cowl (cover) by turning the cowl counterclockwise until a snap is heard. Once disengaged, pull upwards.

Step 2



- Place the plastic opening tool under the speaker grille, and just above the light ring.
- Move the plastic opening tool around the groove while applying upward force to pry loose the 4 clips holding the grille in place.

Step 3



- Using a metal spudger, carefully remove the congestion-sensor antenna by undoing the two clips.

⚠ There is a delicate wire connection to the antenna that is easily broken if not careful.

Step 4 — Congestion-sensing Antenna



- Remove the wire connection to the antenna by soldering it off.
- For help with soldering and de-soldering check out the [iFixit Soldering Guide](#)

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 11:21:07 PM.